



JACKODUR® Atlas formwork element for waterproofing

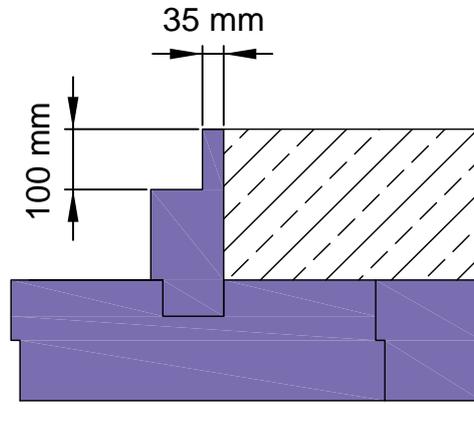

Formwork element for Waterproofing (with 35 mm foam edge).
After solidification of the concrete, the foam edge can be separated with the cutter.

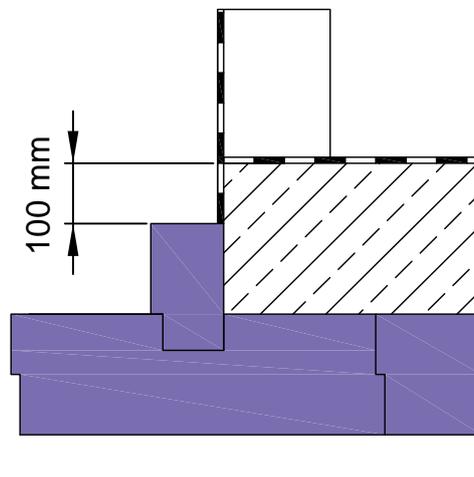

Waterproofing direction on building site according to DIN 18533

System	Perimeter JACKODUR® Atlas	<p>Note: The information in this drawing represents our current state of knowledge and experience. They do not represent any guarantee in the legal sense of the term.</p> <p>When using these products, the specific conditions relative to the particular application must always be taken into account, especially with regard to structural physics, civil engineering and statutory building regulations.</p>	 www.iackon-insulation.com
Date	04/2018		
Detail	01-021		